

GRAEF.

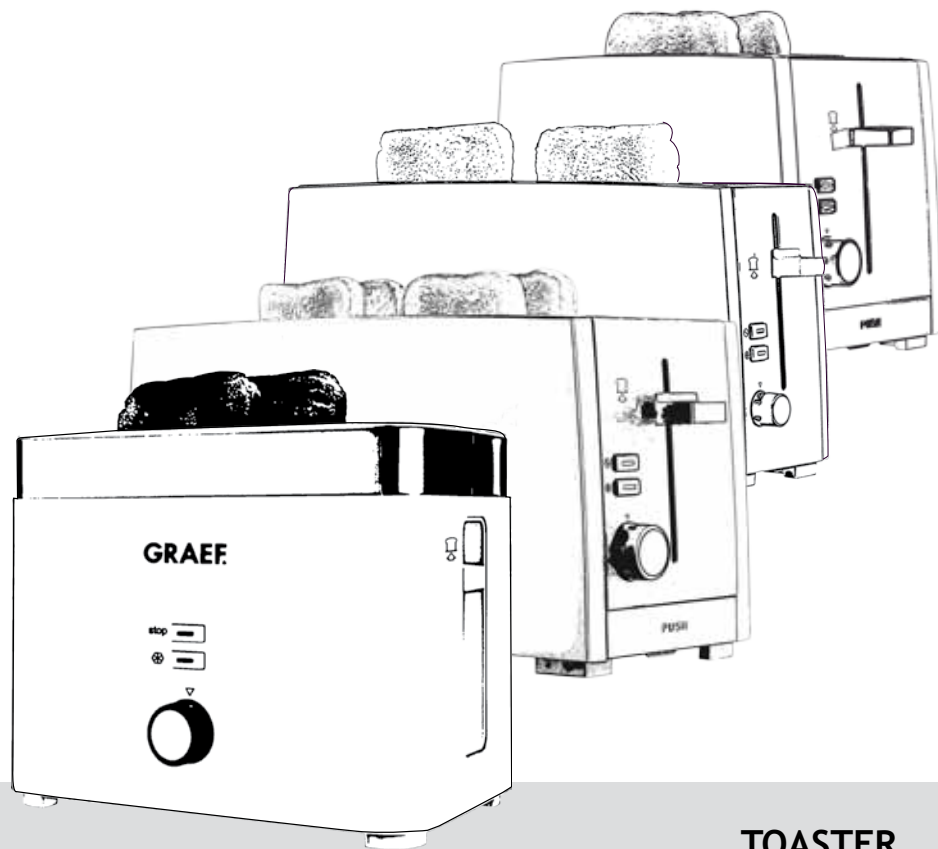


Table of content

Safety instructions.....	3
Before the first use	5
Unpacking	5
Requirements for the installation location	5
Making toast	5
Extra-lift	5
Bread slice centring	6
Attachment for buns	6
Defrost feature.....	6
Stop feature	6
Bun warm-up feature.....	6
Cleaning	6
Customer service department	7
Disposal.....	7
Warranty	7

Safety instructions

This unit complies with the statutory safety regulations. Improper use can, however, lead to personal injury and property damage.

To handle the unit safely, follow the instructions below:

- Check the unit for external, visible damage to the housing, the connector cable and the plug before using it. Do not put a damaged unit into operation.
- To prevent hazards, if the machine's connection cable is damaged, solely the manufacturer or its customer service department or a similarly qualified person is permitted to replace it.
- Repairs are only allowed to be performed by a specialist or by the Graef customer service department. Improper repairs can lead to extreme hazards for the user. Furthermore, the right to warranty claim expires.
- Defective components must be replaced solely with genuine spare parts. Fulfilment of the safety regulations is only guaranteed if these parts are used.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of the reach of children less than 8 years.
- The unit is not intended to be used with an external timer or a separate remote-control system.
- This unit is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service or

similarly qualified persons in order to avoid a hazard.

- Do not use the unit if the connection cable or plug is damaged.
- To prevent hazards, before continuing to use the unit have a new connection cable installed solely by the manufacturer or its customer service department or a similarly qualified person
- Never open the unit housing under any circumstances. If live connections are touched and the electrical or mechanical structure changes, there is a danger of electric shock.
- Never touch any parts that are conducting electricity. They can cause an electric shock or even lead to death.
- Always pull the power supply line from the electric socket with the connection plug, not on the connection cable.
- Make sure the mains cable does not get caught anywhere, which could lead to the unit falling down.
- Do not use the packing material as a toy. Danger of suffocation.
- Never operate the unit without the crumb tray.
- Use the unit only when it is standing upright; never put the unit into operation if is lying on its side or upside down.
- If the toasted goods get jammed, pull the power plug, let the unit cool off and carefully remove the toasted goods. Make sure you do not touch the heating elements.
- The unit emits a great amount of heat towards the top.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Periodically empty the crumb tray.
- Before cleaning, pull the power cord from the electric socket.
- Let the unit cool off before cleaning.
- Do not use any aggressive or abrasive cleaning agents and do not use any solvents.
- Do not scratch off stubborn soiling with hard objects.
- Make sure that no liquid gets into the interior

of the unit.

Before the first use

When using for the first time, operate the unit 1 - 2 times at the middle level without any toast as it is possible that a slight odour will develop due to possible dust remnants on the heating spirals.

Unpacking

To unpack the unit, proceed as below:

- Take the unit out of the carton.
- Remove all pieces of the packing.
- Remove any possibly extant labels on the unit (do not remove the rating plate).

Requirements for the installation location

For safe and flawless operation of the unit, the place of location must meet these prerequisites:

- The unit must be set up on a firm, flat, level, non-slip and heat resistant base that has sufficient load bearing capacity.
- Select the place of location so that children cannot reach the hot surfaces of the unit.

- The unit is not intended for installation in a wall or a built-in cupboard.
- Do not set up the unit in a hot, wet or moist environment.
- The electric socket must be readily accessible so that the power cord can be easily unplugged.
- The unit emits a great amount of heat towards the top. Never place the unit on a cupboard, under curtains or next to combustible materials.
- Never place the unit near paper, fabric or similar materials. The bread can burn.

Making toast

Connect the unit to the mains supply:

- Put the toasting goods into the slot.
- Select the desired degree of browning (1 light - 6 very dark)
- Press the lift button down until it latches.

Extra-lift

The extra-lift eases removing the toasted goods.

Lift the lift button and take out the toasted

goods.

Bread slice centring

It does not matter if you want to toast large or small slices of bread, or thick or thin ones, the bread slice centring device always positions your toasted goods at the right place and ensures uniform browning on both sides.

Attachment for buns

The attachment for buns can also be used as a warmer for your freshly toasted bread. Simply place the toasted goods on the bun attachment.

Defrost feature

It is not necessary to adjust the control knob as the defrost time is preset

- Put the frozen toasting goods into the slot.
- Press the lift button down until it latches.
- Press the * button.

Stop feature

- Press the stop button.
- The toasting process is interrupted.

Bun warm-up feature

To warm up buns, proceed as below:

- Place the bun attachment on the unit.
- Place the buns on the bun attachment.
- Set the browning degree control to between steps 2 and 3.
- Press the lift button down until it latches.
- When the lift button returns to the top, turn the buns over once and repeat the process.

Caution

The attachment for buns is hot during toasting; do not touch it.

Cleaning

- Clean the exterior of the unit with a soft, moist cloth. If heavily soiled, a mild detergent can be used.
- Crumbs that have fallen down collect in the crumb tray.
- Press the “Push” button.
- Remove the crumb tray and empty the crumbs.
- Replace the crumb tray.

Customer service department

If your Graef unit has a defect, please contact your dealer or the Graef customer service department.



Disposal

At the end of its service life, this product must not be disposed through normal domestic waste; rather it must be disposed at a collection point for recycling electronic domestic refuse. The symbol on the product and in the operating instructions points this out. The materials can be recycled in accordance with their markings. By recycling, making use of the materials or other forms of recycling old units you are making an important contribution to protecting our environment. Please ask your municipal administration about the responsible disposal sites.

Warranty

2 year warranty

Starting with the date of purchase, we assume a 24 month manufacturer's warranty for

defects that are attributable to manufacturing and material defects. Your legal warranty rights in accordance with § 439 ff. German Civil Code-E remain unaffected by this clause. Not included in the warranty are damages that have arisen due to improper handling and use as well as defects which have only a slight influence on the functioning or value of the unit. Furthermore, shipping damages, unless our responsibility, are excluded from warranty rights. Warranty claims are excluded for damages that arise due to repairs we or our representatives have not performed. In case of a justified complaint, we will repair or replace the defective product with a flawless product as we choose.