


EN

Instruction Manual Universal Slicer

GRAEF

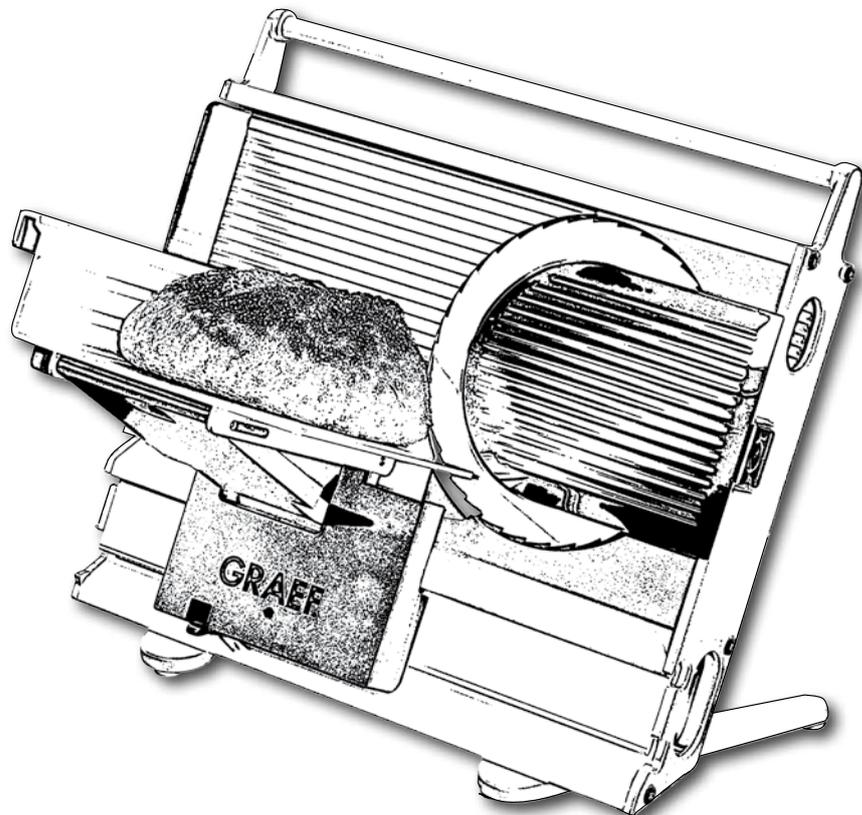

CE

UNA

Unpacking

To unpack the unit, proceed as below:

- Take the unit out of the carton.
- Remove all pieces of the packing.
- Remove any possibly extant labels on the unit (do not remove the rating plate).

Requirements for the installation location

For safe and flawless operation of the unit, the place of location must meet these prerequisites:

- The unit must be set up on a firm, flat, level and non-slip base that has sufficient load bearing capacity.
- Select the place of location so that children cannot reach the sharp blade in the unit.

Sources of hazards

The rotating blade can cut off body parts. Your fingers, especially the thumbs, are endangered. For this reason, never reach into the space between the stop plate and the holder for the material to be sliced as long as the stop plate is not completely closed, i.e., is placed below "0".

Cutting

- Swivel the machine feet out as far as they go.
- Push the slider on the underside of the carriage together and turn the carriage over.
- Put the thumb protection into a horizontal

position

- Place the cutting goods on the carriage.
- Adjust the desired cutting width by turning the hand wheel.
- Push the needed switch „Pulse“ or „Permanent“
- Press the cutting goods gently against the stopper plate and lead the carriage evenly against the blade.
- After finishing the cutting process, turn off the appliance.
- Push the button on the side of the thumb protection and flip it.
- Push the slider on the underside of the carriage together and flip it.

Important

Let the engine cool off after a permanent usage of approx. 5 minutes.

Tips

Soft cutting goods (for example cheese or ham) can be cut best when cooled.

Soft cutting goods are cut better when you move it forward slower.

When cutting cucumbers or carrots it helps to cut them to an identical size beforehand, and then lead them to the cutter using the scrap holder.

Food holder

When the items to be sliced are shorter and 10 cm so it is no longer possible to correctly hold

onto them, the food holder must be used.

- Place the food rests or the small items for slicing on the carriage.
- Set the food holder on the rear of the carriage and put the food holder onto the items to be sliced.
- Proceed as above as described in "Slicing".

Important

The food holder lets you slice small items such as mushrooms and tomatoes.

The unit must not be used without the food holder unless the size and shape of the items to be sliced do not permit its use.

Cleaning

Clean the exterior of the unit with a soft, moist damp cloth. If heavy soiled, a mild detergent can be used.

Blade removal

Please occasionally unscrew the blade and clean the interior of the unit. Especially, when "juicy" slicing items (tomatoes, fruit, roasts, etc.) were sliced. Handle the blade with great care!

- Pull the carriage all the way towards you.
- Remove the blade cover plate.
- Loosen the blade by turning the blade screw clockwise.
- Clean the insides of the blade with a damp cloth.

- Lubricate the gliding ring and gear on the inside of the blade with Vaseline after cleaning.
- Replace the blade and the blade cover plate in reverse sequence.

Carriage

To clean the carriage better, it can be removed from the appliance.

- Push the carriage bar on the front side (bottom) of the carriage.
- Keep it pushed and pull off the carriage towards the back (towards body).
- Clean the carriage with a moist cloth or under running water.
- Clean the roller with a damp cloth.
-
- Please apply a few drips of resin-free oil or Vaseline on the carriage rail once a month. Remove excess oil / Vaseline with a soft cloth.
- Keep the carriage lock pushed and push the carriage towards the front on the carriage rail.

Safety instructions

This unit complies with the statutory safety regulations. Improper use can, however, lead to personal injury and property damage.

To handle the unit safely, follow the instructions below:

- Check the unit for external, visible damage to the housing, the connector cable and the

plug before using it. Do not put a damaged unit into operation.

- If the machine's connecting cable is damaged, continued use of the machine is only allowed if it has been replaced with a new one. Have it installed solely by the manufacturer or its customer service or a similarly qualified person to prevent hazards.
- Repairs are only allowed to be performed by a specialist or by the Graef customer service department. Improper repairs can lead to extreme hazards for the user and damage the unit. Furthermore, the warranty claim expires.
- Only Graef customer service is authorised to repair the unit during the warranty period, otherwise the warranty expires for subsequent damages.
- Defective components must be replaced solely with genuine spare parts. Fulfilment of the safety regulations is only guaranteed if these parts are used.
- This device shall not be used by persons (including children) with limited physical, sensory or mental capabilities or lacking experience and/or knowledge, unless they are supervised by a person responsible for their safety or they received instructions on how to operate the device.
- Children should be supervised to ensure that they do not play with the device.
- The unit is not intended to be used with an external timer or a separate telecontrol sys-

tem.

- This unit is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service or similarly qualified persons in order to avoid a hazard.
- Always pull the supply line from the electric socket using the connector plug, not on the connector cable.
- Never operate the unit with wet hands.
- This unit must be used with the carriage and food holder unless the size and shape of the items to be sliced do not permit use of the food holder.
- In stand-by mode, turn the control knob clockwise past the zero position up to the limit so that the stop plate covers the cutter.
- Do not use the packing material as a toy. Danger of suffocation.
- Do not touch the blade with your fingers. It is very sharp and cause severe injuries.
- Make sure the unit is switched off and not connected to the mains supply.

- Check to make sure the limit stop is closed (cutter blade is covered).
- Do not use any aggressive or abrasive cleaning agents and do not use any solvents.
- Do not scratch off stubborn soiling with hard objects.
- Do not wash in the unit in water or immerse it into water.